


### STÄENDE SPINNAKERBOM

med innerände av tratt/pik typ (534-778)

Med bommen i vertikalt viloläge kan spärren på trattbeslaget oavsiktligt lösas ut av slag från fallkrokar, öljetter i försegel m.m. Spärren skall därför vara låst med en skruv.

På spinnakerbommar som beställts som "stående" monteras denna skruv av oss före leverans.

På övriga bommar monteras spärrskruven enligt nedan:

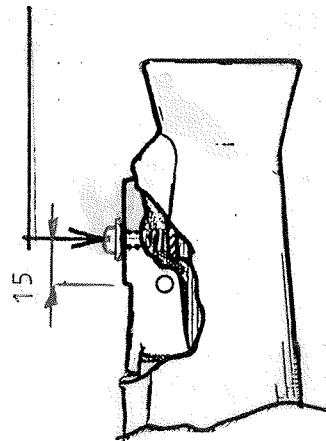

1. Borra försiktigt  $\emptyset$  5,3 mm (i markeringen om sådan finnes).
2. Skruva i bif. självgängande krysspärrskruv M6 x 12 med underliggande nylonbricka  $\emptyset$ 13 x  $\emptyset$ 6 x 1.5. Smörj skruven och pressa hårt på den vid monntaget.

För att undvika att skruven korroderar fast bör den lossas och smörjas några gånger varje säsong.


### VERTICAL SPINNAKER POLE

with bayonet inboard fitting (part no 534-778)

When the pole is stowed in its vertical position the bayonet can accidentally be released as the release trigger can be hit by halyard shackles, head sail cringles etc.

The release trigger must be locked by a screw. Poles, which are ordered as "vertical" will be equipped in our factory with this screw.

On other poles the screw is mounted acc. to the description below:

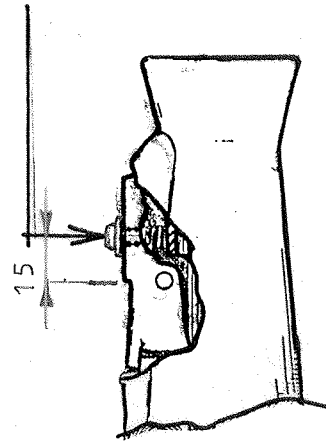

1. Drill carefully  $\emptyset$  5,3 mm (at the notch if any).
2. Fit the encl. selftapping phillips screw M6 x 12 incl. nylon washer  $\emptyset$ 13x $\emptyset$ 6x1.5. Lubricate the screw and press it hard when mounting.

Loose the screw and lubricate it a couple of times every season or corrosion can make removal impossible.