

# MDS Head board toggle

Kit no.            **511-701-05**  
                          **511-702-05**

## Mounting instruction

### Fasteners:

Screws are included in the kit:

511-701-05: MC6S 6x53

511-702-05: MLC6S 6x40

### Tools needed:


Allen-key 5mm

(Large screwdriver)


### **Mounting:**

1. Dismantle the top traveller by removing the allen-screw.
2. Remove the sail entry by pushing the middle piece in and down where it is marked "⇐ RELEASE". A large screwdriver can be used to make this operation easier.
3. Insert the top traveller sideways into the opening in the mast. Make sure the arrow printed on the traveller points up towards the masthead.
4. Keep the top traveller just above the opening in the mast.
5. Insert the pre-assembled toggle/traveller sideways into the opening in the mast and simultaneously slide the free (upper) foot of the toggle into the top traveller.
6. Fit the screw into the top traveller and tighten\*. The full batten and intermediate travellers can now be inserted.
7. Put the sail entry back by sliding it down into the opening while pushing the middle piece where it is marked "⇐ RELEASE". Push the sail entry in and up.

\*) **CAUTION!** Do not over-tension the screws - the toggle must be able to articulate freely. This applies to all travellers.

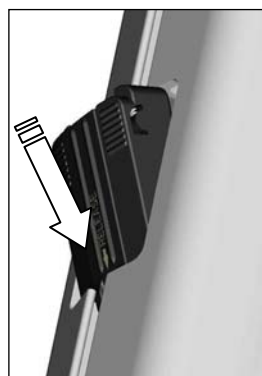

2

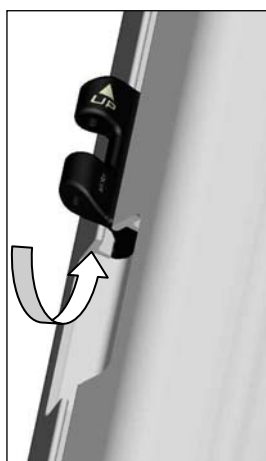

3, 4



5, 6